



\* Specifications, color and design of the products are subject to change without notice.

This product is a USB2.0 compatible terminal module that extends the analog I/O function of USB port of PCs. 8ch/16bits analog inputs are employed and signal lines can be directly connected to the screw terminals in the system. Compact design to match Note PCs and excellent in mobility as operation is powered by USB bus. This product accompanies Windows driver and full-fledged data logger software "C-LOGGER".

- \* The contents in this document are subject to change without notice.
- \* Visit the CONTEC website to check the latest details in the document.
- \* The information in the data sheets is as of June 2022.

## Features

#### Input 4µsec/ch, 8ch, 16bit resolution

Equipped with the analog input (4µsec/ch, 16bit, 8ch) and digital I/O (4ch each, LVTTL level)

# Compatible to USB1.1/USB2.0 and not necessary to power this product externally as the bus power is used.

Compatible to USB1.1/USB2.0 and capable to achieve high speed transfer at HighSpeed (480 Mbps). Not necessary to power this product externally as the bus power of USB is used.

# Equipped with the buffer memory which can be used in either FIFO or ring format

This product includes buffer memory (8K data for analog input) which can be used in either FIFO or ring format. You can perform analog I/O in the background, independent of software and the current status of the PC.

#### Windows compatible driver libraries are attached.

Using the attached driver library API-USBP(WDM) makes it possible to create applications of Windows. In addition, a diagnostic program by which the operations of hardware can be checked is provided.

## Supported to the data logger software [C-LOGGER]

Supporting the data logger software [C-LOGGER] that enables the graph display of recorded signal data, file saving, and dynamic transfer to the spreadsheet software program "Excel".

#### Sampling can be driven by a clock or by various triggers

Sampling can be started and stopped by software or by an external trigger (timing controlled by an externally input control signal).

The sampling period can be controlled by the internal clock (highprecision timer included on the board) or by an external clock (externally input control signal).

#### Terminal connector facilitating wiring

Wiring is easy as the terminal connector (screw type) is used.

## Software-based calibration function

Calibration of analog input can be all performed by software. Apart from the adjustment information prepared before shipment, additional adjustment information can be stored according to the use environment.

## **Specifications**

Item	Specification		
Analog input			
Isolated specification	Unisolated		
Input type	Single-Ended Input		
Number of input channels	8ch		
Input range	Bipolar±10V		
Maximum input rating	±20V		
Input impedance	$1M\Omega$ or more		
Resolution	16bit		
Non-Linearity error	±12LSB		
Conversion speed	4µsec/ch (Max.) *3		
Buffer memory	8K data		
Conversion start trigger	r Software / external trigger		
Conversion stop trigger	r Number of sampling times / external trigger/software		
External start signal	LVTTL level (Selecting the rising / falling edge to the DI00-pin by the software)		
External stop signal	LVTTL level (Selecting the rising / falling edge to the DI01-pin by the software)		
External clock signal	LVTTL level (Selecting the rising / falling edge to the DI02-pin by the software)		
Digital I/O			
Number of input channels	Unisolated input 4ch (LVTTL positive logic) *4*5		
Number of output channels	Unisolated output 4ch (LVTTL positive logic)		
USB			
Bus specification	USB Specification 2.0/1.1 standard		
USB transfer rate	12Mbps (Full-speed), 480Mbps (High-speed) *6		
Power supply	Bus power		
Common section			
Connector	14 pin (screw-terminal) plug header		
Number of terminals used at the same time	127 terminals (Max.) *7		
Power consumption (Max.)	5VDC 370mA		
Operating condition	0 - 50°C, 10 - 90%RH(No condensation)		
Physical dimensions (mm)	64(W) x 62(D) x 24(H) (exclusive of protrusions)		
Weight	90g (Not including the USB cable, attachment)		
Attached cable	USB cable 1.8m		
Compatible wires	AWG28 - 16		
Standard	VCCI Class A, FCC Class A, CE Marking (EMC Directive Class A, RoHS Directive), UKCA		

- \*1 The non-linearity error means an error of approximately 0.1% occurs over the maximum range at 00C and 50CC ambient temperature.
- \*2 When using the signal source equipped with the high-speed operational amplifier
- \*3 This numerical displays the conversion speed for A/D, D/A converter. The minimum executable sampling cycle depends on the operating condition of the terminal.
- \*4 You cannot use both the DI00 / DI01 / DI02-pin of digital input feature and the external start / stop signal / external clock input simultaneously.
- \*5 Each input accept TTL (5VDC) level signals.
- \*6 The USB transfer speed depends on the host PC environment used (OS and USB host controller).
- \*7 As a USB hub is also counted as one device, you cannot just connect 127 USB terminals.

## **Support Software**

## Driver Library API-AIO(WDM)

The API-AIO(WDM) is the Windows version driver library software that provides products in the form of Win32 API functions (DLL). Various sample programs such as Visual Basic and Visual C++, etc and diagnostic program \*1useful for checking operation is provided.

## Data Logger Software C-LOGGER

C-LOGGER is a data logger software program compatible with our analog input products. This program enables the graph display of recorded signal data, zoom observation, file saving, and dynamic transfer to the spreadsheet software "Excel". No troublesome programming is required.

For details on the supported operating systems and applicable languages and to download the latest version, see the services on the CONTEC website

## LabVIEW VI Library for Data Acquisition DAQfast for LabVIEW

This is a data collection library to use our devices in the LabVIEW by National Instruments. With Polymorphic VI, our design enables a LabVIEW user to operate seamlessly. Our aim is for the customers to perform easily, promptly what they wish to do.

For more details on the library and download of DAQfast for LabVIEW, please visit the CONTEC's Web site.

## **Cable & Connector**

14pin Screw Terminal Connector Set(6 pieces)

## • • •

: CN6-Y14

#### Accessories

Bracket for USB I/O Terminal products : BRK-USB-Y

## **Packing List**

USB terminal [AI-1608GY-USB]...1

Interface connector plugs...2

First step guide...1

Disk \*1 [API-USBP(WDM)]...1


USB Cable(1.8m)...1

USB Cable Attachment...1

Serial number label...1

Product Registration Card & Warranty Certificate...1

## **Physical Dimensions**

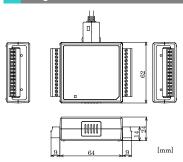


## Cable connection

When connecting the product to an external device, you can use the supplied connector plug.

For wiring, strip off approximately 9 - 10mm of the covered part of a wire rod and then insert it to the opening. After the insertion, secure the wire rod with screws. Compatible wires are AWG 28 - 16.

#### ⚠ CAUTION


Removing the connector plug by grasping the cable can break the wire.

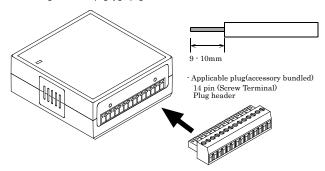


## Using the On-terminal Connectors


#### Connecting a terminal to a Connector

To connect an external device to this terminal, plug the cable from the device into the interface connector (CN1, CN2) shown below.

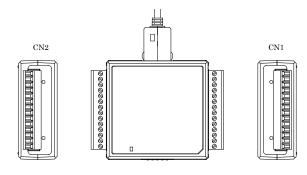

## Connector Pin Assignment

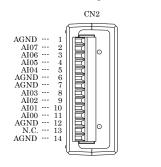

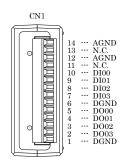

Al00 - Al07	Analog input signal. The numbers correspond to channel numbers.
AGND	Common analog ground for analog input signals.
DI00 - DI03	Digital input signal.
DO00 - DO03	Digital output signal.
DGND	Common digital ground for digital I/O signals

2 AI-1608GY-USB

<sup>\*</sup> Check the CONTEC's Web site for more information on these options.

<sup>\*1</sup> Driver software, User's Guide (this guide)




## **Analog Input Signal Connection**

## Single-ended Input Connection (Flat Cable)


The following figure shows an example of flat cable connection.

Connect separate signal and ground wires for each analog input channel on CN2



## Single-ended Input Connection (Shielded Cable)

The following figure shows an example of shield cable connection. Use shielded cable if the distance between the signal source and product is long or if you want to provide better protection from noise. For each analog input channel, connect the core wire to the signal line and connect the shielding to ground.




#### ⚠ CAUTION

- If the signal source contains over 1MHz signals, the signal may effect the cross-talk noise between channels
- If the product and the signal source receive noise or the distance between the product and the signal source is too long, data may not be input properly.
- An input analog signal should not exceed the maximum input voltage (relate to the product analog ground).
   If it exceeds the maximum voltage, the product may be damaged.
- Connect all the unused analog input channels to analog ground.
- The signal connected to an input channel may fluctuate after switching of the multiplexer. In this case, the
  cable between this product and the signal source can be shortened or a buffer with a high-speed amplifier can
  be placed between the product and the signal source in order to reduce the fluctuation.


## Digital I/O signals Connection

The digital I/O signal can be used .as the control signal (external trigger input signal and sampling clock input signal, etc.), too. The following sections show examples. All the digital I/O signals are LVTTL (3.3VDC) level signals.

## **Digital Input Connection**



## **Digital Output Connection**



#### ⚠ CAUTION

Do not short the output signals to analog ground, digital ground, and/or power line.  $\,\,$  Doing so may damage the terminal.

Each input accepts 5V TTL level signals

## Reference

For the operation timing when using it as control signal, see "Control Signal Timings" in Chapter 7 "About Hardware - Control Signal Timings".

# Differences between AI-1608AY-USB and AI-1608GY-USB

The connector pins of the Al-1608GY-USB are compatible with those of the conventional Al-1608AY-USB, but the following main differences exist.

	AI-1608AY-USB	AI-1608GY-USB
Analog input conversion speed	10usec/ch	4usec/ch
Analog input buffer memory	1k data	8k data